

00 60 654 Replacing air filter element (if applicable with installing/removing special tool, centre stand)

Note

Remove loose parts from the intake air silencer.

1

► Preparatory work


– without centre stand^{OE} (0636)

- Placing motorcycle on auxiliary stand◊
- Removing seat
- Remove the centre trim panel
- Disengaging both side panels


2

► Removing air filter

- Disengage cable **(1)** for the air-temperature sensor (**ar-row**).

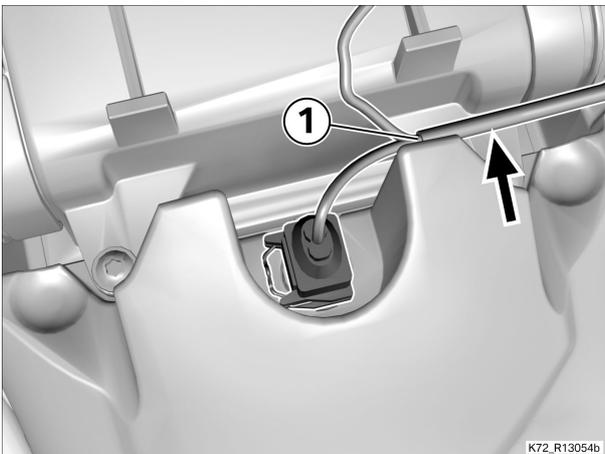

- Remove screws **(1)**.
- Remove cover **(2)** noting the sealing faces (**ar-row**s).
- Remove air-filter element **(3)**.

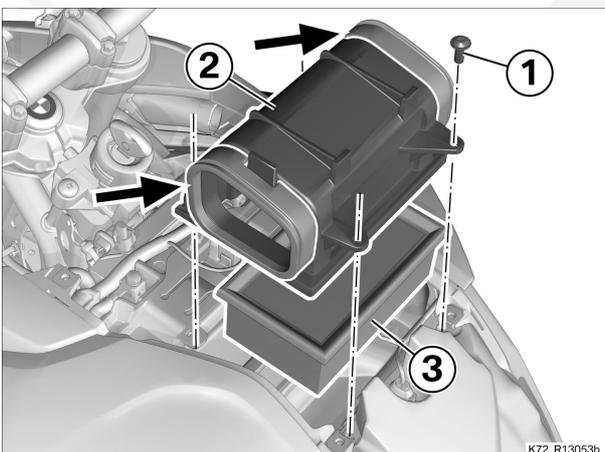


3

► Replacing air filter and cleaning intake air silencer


- Remove loose parts from the intake air silencer.
- Examine the intake air silencer with a worklight or close the intake funnels and blow in compressed air.
- Replace the air filter element.

4

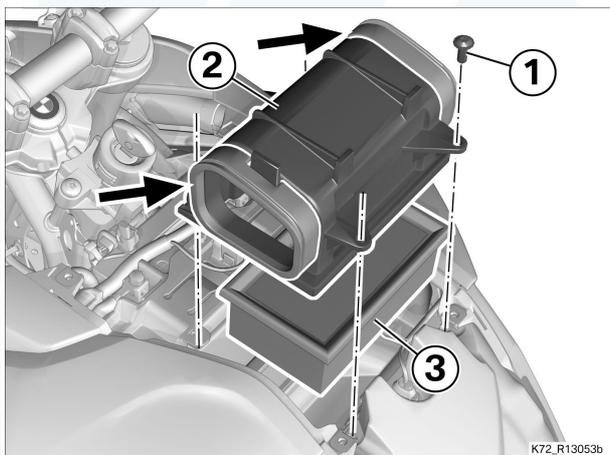

► Installing air filter

- Insert air-filter element (3).
- Install cover (2) noting the sealing faces (arrows).
- Install screws (1).

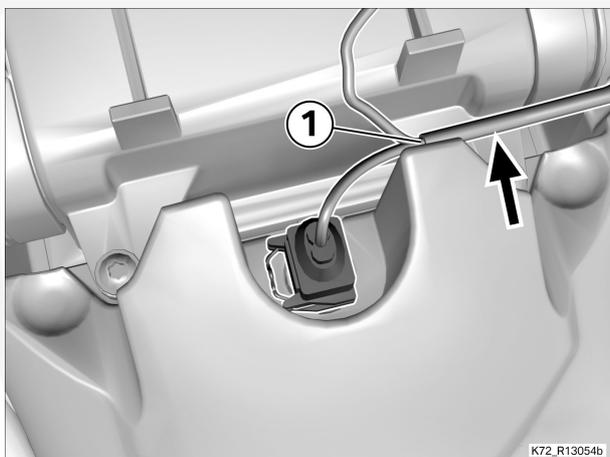

- Secure cable (1) for the air-temperature sensor (arrow).

5

► Finishing work

- Securing both side panels
- Install the centre trim panel
- Installing seat
 - without centre stand^{OE} (0636)
- Removing motorcycle from auxiliary stand◊

- Final check of work performed

